


#1582 SURFACE BOLT


INSTRUCTIONS FOR TOP & BOTTOM BOLTS

1. DETERMINE ON WHICH SIDE OF DOOR BOLT IS TO BE FASTENED
1. PREPARE DOOR FOR BRACKET ASSEMBLY SCREW HOLE LOCATION
3. ATTACH BRACKET ASSEMBLIES TO DOOR
4. ALIGN STRIKE WITH BOLT AND ATTACH TO FLOOR OR FRAME


HINGE SIDE MOUNTING SHOWN

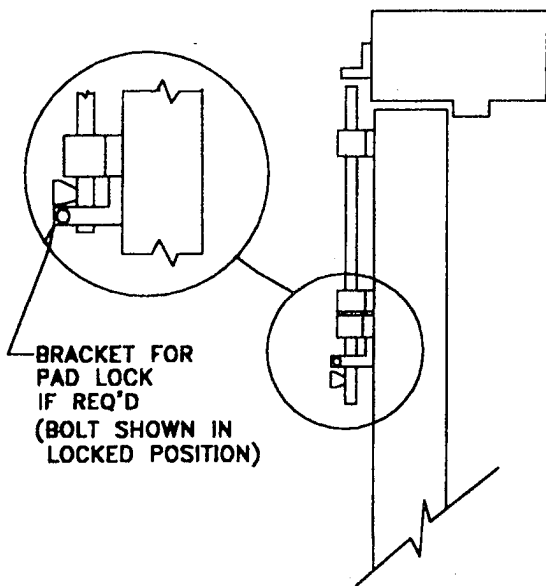


TOP MOUNT

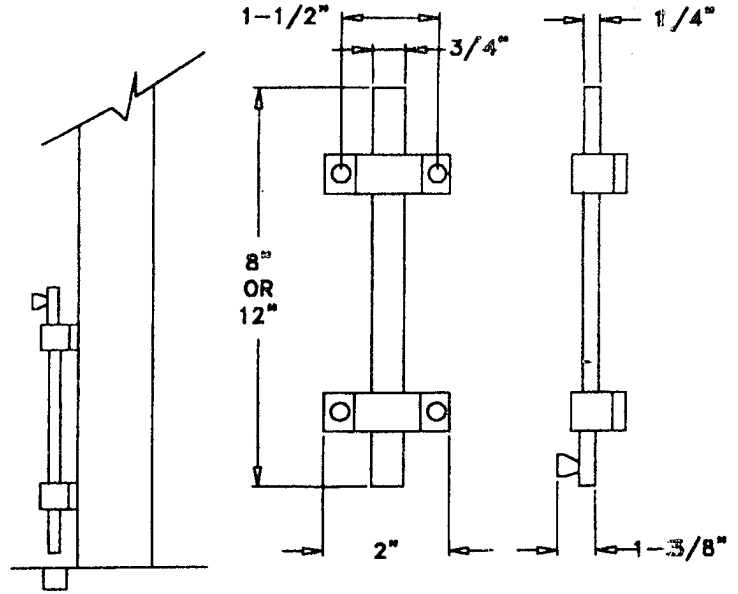

BOTTOM MOUNT

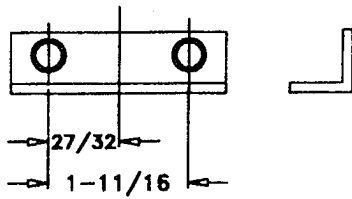

FRAME STRIKE

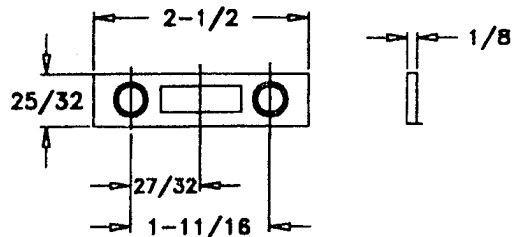

FLOOR STRIKE

SCREW DETAIL

BOLT-

- (4) 12-24 X 1" PAN HEAD M.S.
- (4) 10 X 1-1/4" PAN HEAD W.S.

STRIKE-

- (2) 10-32 X 1-1/2" FLAT HEAD M.S.
- (2) 10 X 1-1/2" FLAT HEAD W.S.

FOR SPECIAL LONGER BOLTS-
ADDITIONAL BRACKETS AND SCREWS
PROVIDED AS REQUIRED

DON-JO MFG., INC.

P.O. BOX 929 * STERLING, MA. 01564-0929

* PH (800) 628-8389 * FAX (800) 278-8202

E-MAIL: sales@don-jo.com * <http://www.don-jo.com>